

Vanguard Grip Equipment Production Cart

Assembly & user manual

CT-VNGD-01 Vanguard Grip Equipment Production Cart



Contents

Safety	3
Know your cart	4
Setting up the cart	5
Using the cart	6
Troubleshooting & care	7
Warranty & support	8

Before you start

- Read the safety instructions on page 3.
- Check that the cart and included components are present and undamaged.
- No tools are required for the setup steps described in this manual.

Safety

Read these points before using the Vanguard production cart.

WARNING — could cause serious injury

- 1 Never exceed the maximum load capacity of 500 kg (1,100 lb).** This limit applies to the total weight of all equipment loaded onto the cart, including the net basket and its contents.
- 2 Apply the foot brake before loading or unloading the cart,** and whenever the cart is parked. Make sure the cart stays still before handling equipment.
- 3 Keep all four tyres inflated to 50 psi.** Low tyre pressure makes the loaded cart harder to control.

CAUTION — could cause minor injury or damage

- 4 Keep your fingers clear** when adjusting the shelf, the pull bar and the ladder holders.
- 5 Place heavy items on the lower shelves** and spread the load evenly.
- 6 Check before every use:** the tyres, the foot brake, the ladder holder pins and the net basket fixing. Do not use the cart if any part is damaged, loose or not securely fitted, and contact us (page 8).

Know your cart

Each part is marked with a letter. The steps in this manual refer to these letters.



A Telescopic pull-out ladder holder (×2)

B Pull bar (tilts up to 120°)

C Adjustable shelf

D Detachable net basket

E Wheels (×4): 2 swivel, 2 rigid, 10 in (25 cm)

Note: the colour of the wheel fork may vary as per availability.

What's in the box

Vanguard production cart ×1, including the detachable net basket (D).

Setting up the cart

Attach the net basket, then set the shelf to the height you need.

No tools needed. The net basket detaches and the shelf adjusts by hand, so the cart is quick to set up and ready to work as soon as you arrive on set.

1 Attach the net basket




a Place the net basket (D) at the front of the cart, or wherever it is most useful.



b To fit it at the side, hang the hooks at the end of the net basket over the side frame. Check that all hooks are fully engaged before loading. Lift it off to move it.

2 Adjust the shelf

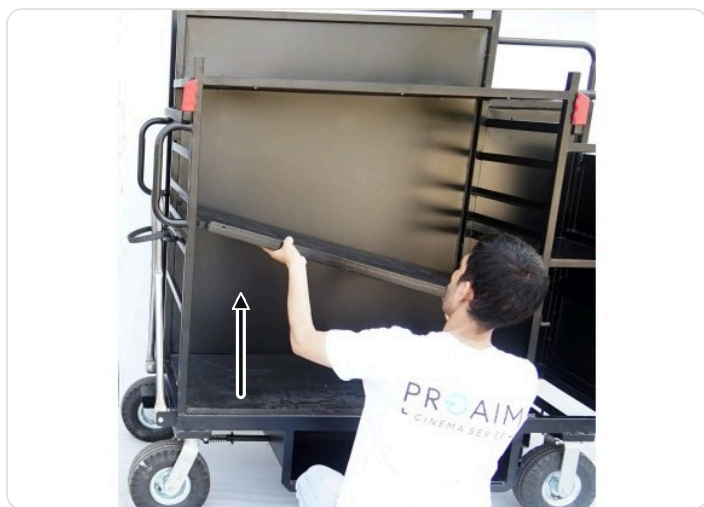

a Lift the adjustable shelf (C) and place it at the height you need, at the same height on both sides.



b Check that the shelf sits securely on both sides before loading.


Using the cart

Use the pull bar to move the cart, and the ladder holders to carry long equipment.

3 Use the pull bar



a Swing the pull bar (B) down and pull to move the cart. The pull bar tilts up to 120°. Make sure the path is clear before moving.

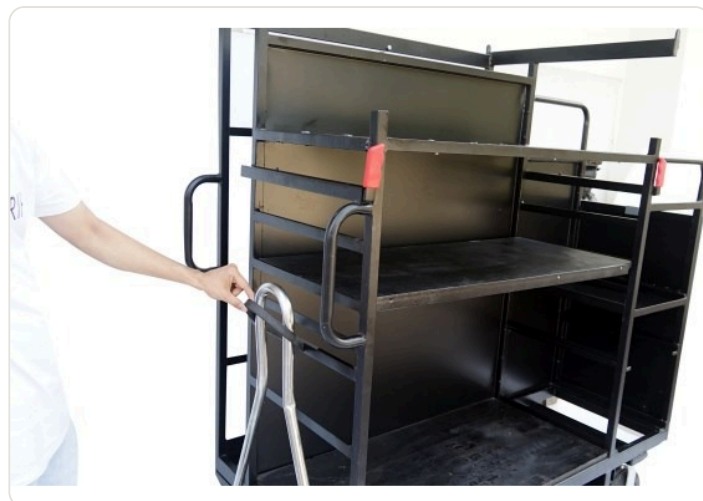


b Release the bar at any angle and it holds its position. After use, store it upright in the rubber holder.

4 Extend the ladder holders



a To carry a ladder, stands or other long equipment on top of the cart, press the pin on the ladder holder (A).

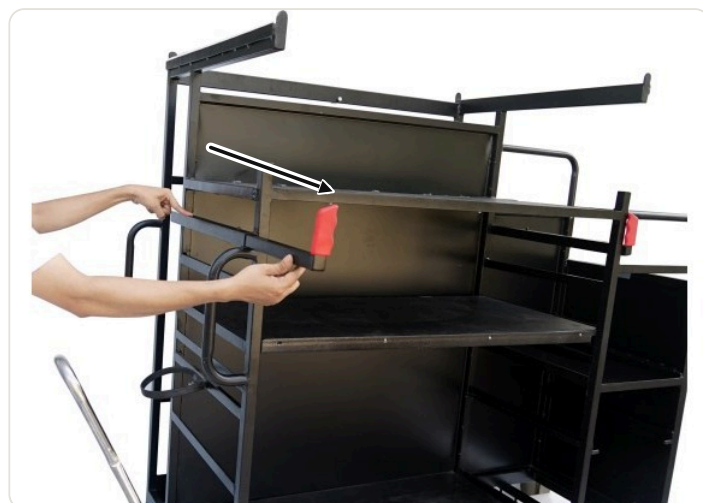

b Pull the holder out to suit the length of your equipment, and repeat for the second holder. Check that both holders are secure, then rest the equipment evenly across them.



Your Vanguard cart is ready to go

Shown with optional accessories.

Parking: press the foot brake to keep the cart in place. Release it before moving the cart.

Troubleshooting & care

Problem	Likely cause	What to do
Cart rolls when parked	Foot brake not applied	Press the foot brake.
Cart is hard to push or pulls to one side	Low tyre pressure	Inflate all four tyres to 50 psi.
Ladder holder does not extend	Pin not pressed fully	Press the pin fully, then pull the holder out (page 6).
Shelf is not level	Shelf not set at the same height on both sides	Lift the adjustable shelf (C) and place it at the same height on both sides (page 5).

Care

- Wipe the cart with a dry, soft cloth.
- Store the cart indoors, in a dry place.

Before every use

- All four tyres are at 50 psi.
- The foot brake holds the cart.
- The pins and the net basket are secure (Safety, point 6).

Still not solved? Contact us with your product code (CT-VNGD-01), order number, and a photo or short video of the problem (page 8).

Warranty & support

Warranty

The Vanguard production cart comes with a one-year warranty from the date of purchase. During this period, Proaim will repair the product free of charge, including parts and labour.

The warranty does not cover transport costs or damage caused by misuse or accidents. All warranty repairs are subject to inspection by Proaim.

Liability

Proaim is not liable for damage caused by third-party products, accidents, misuse, neglect, improper care, mishandling during transport, or servicing by anyone other than Proaim.

Contact us

If you have any issue with your Vanguard cart, please contact us. We are committed to helping you get the best from your Vanguard cart.

Email sales@proaim.be

Phone [+3228877411](tel:+3228877411) (9AM-5PM CEST)

WhatsApp [+32477843327](tel:+32477843327) (9AM-5PM CEST)

Web business.proaim.be/pages/contact-us

To help us assist you quickly, please have your product code (CT-VNGD-01), order number and a photo or video of the issue ready.